



MADE IN GERMANY

Instruction manual

Photo plate QRP



The FLM photo plates type QRP

are suitable for all common photo and film cameras, spotting scopes and other devices with a 1/4" connection thread. The QRP-70, QRP-130 and QRP-160 also offer the possibility of a 3/8" screw connection, as is the case with full format or studio cameras. Therefore the above mentioned plate types are supplied with two screws.

The unused screw is always removed. To remove the 1/4" screw, first unscrew the 3/8" screw from the panel. The 1/4" screw can then be removed. Now the 3/8" screw is screwed in again until it can be moved freely in the slot.



Fig. 1

Lateral scale

The lateral scale (from QRP-40) is used to align the camera and is especially helpful for macro photography. If the image cannot be brought into focus by the focus of the lens, the plate in the base (e.g. type QRB) can be moved. The scale facilitates fine adjustment. The FLM-QRB, SRB and PR-15 are provided with a zero point mark for this purpose.



Fig. 2

The lateral drillings are provided with a thread. Further accessories such as the QRP-Stop or the QRP level can be attached here.

QRP screws

The slot of the screw(s) is milled extra wide so that a coin, e.g. 5 cents, can be used as drive. You almost always have some small change with you. A screwdriver is rather not part of the photographic equipment. In addition, a hexagon socket (Allen drive) is fitted in the middle of the screw. A standard hexagon socket spanner can be used here.



Fig. 3



Fig. 3a

Accessories

The lateral drillings are provided with a thread. Further accessories such as the QRP-Stop or the QRP level can be attached here. You can find further information on our homepage under accessories: flm-gmbh.de/accessories or in the online shop at shop.flm-gmbh.de/accessories



Fig. 4



Fig. 5



Fig. 6



Fig. 7